

THIS PRODUCT DOES NOT CONTAIN TOBACCO OR NICOTINE. NOT INTENDED FOR TOBACCO USE. FOR USE WITH LEGAL HERBS ONLY.



Make sure to keep out of the reach of children and/or unqualified persons.



@randyswired @randyswired @randyspapers

### KIT INCLUDES

- Echo Vaporizer
- Charging Cable
- Metal Tool/Cleaning Brush
- 4 Replacement Screens

The Echo is specifically designed to vaporize your herb and not combust. The 5 preset temperature settings are specifically set to offer 5 different styles of vaporization. The lowest setting will heat your material to a temperature of 356°F. At this temperature the material will vaporize slowly and produce a small amount of vapor. At the next setting, the material will be heated up to 374°F. The next temperature setting is 392°F and this will bake your herb rather quickly and produce a medium level of vapor. The fourth temperature setting is 410°F. At this temperature your herb will be baked rather quickly and produce a dense level of vapor. With the final heat setting of 428°F, your herb will be quickly heated up and produce a thicker level of vapor.

### OPERATING INSTRUCTIONS

- Step 1:** Remove the magnetic mouthpiece.
- Step 2:** Gently pack ground material into the Echo baking chamber. Make sure not to overpack your chamber.
- Step 3:** 5 clicks to turn the battery on.
- Step 4:** Select temp setting: Hold for 2 seconds to change temp setting.

1 light: 356°F	Light Vapor	Dense Vapor
2 lights: 374°F		
3 lights: 392°F	356°F	428°F
4 lights: 410°F		
5 lights: 428°F		

- Step 5:** Wait for the device to heat up. The LED indicator will stop flashing when the device fully heats up.
- Step 6:** Once the device is to temperature, inhale slowly. Enjoy.

### Warnings:

- Vaporizer may be hot after use. Be cautious when touching the device after any usage.
- Turn off the vaporizer when not in use!

### CONNECT WITH OUR SOCIALS

- @Randyspapers
- @Randyspapers
- @Randyswired
- @Randyswired
- @Randyswired

### LIMITED WARRANTY INFO

Randys offers 2 types of warranty on all of our vaporizers!

Limited Warranty - 1 Year

Covers defects that may be present such as electrical components.

Limited Component Part Warranty - 1 Year

Covers damages involving glass, coils and/or mouthpieces.

Visit: [Randys.com/warranty](http://Randys.com/warranty) for more info!

### INTRODUCTION

Thank you for purchasing the Randys Echo! Please read and follow the instructions carefully. Understand them fully before your first use. It is recommended that these instructions are put into a safe place for future reference. We hope you enjoy the quality and performance of your new Echo vaporizer.

You must be over 18 years old (21 in some states) to purchase and use the Randys Echo. This product should not be used by children, women who are pregnant or breastfeeding, or those with life threatening illnesses without first consulting a doctor!


Randys Echo is not a medical device and is not intended to diagnose, cure, treat, or prevent any diseases or other conditions. If you have any health problems, consult your doctor before using. Randys Echo is not intended to administer medicinal or illegal substances of any kind. Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under law of your jurisdiction.

### SPECIFICATIONS

<b>Battery Capacity:</b> 1200mAh
<b>Charging Voltage/Current:</b> 5V/500mA
<b>Working Voltage:</b> 3.3V-4.2V
<b>Pen Size:</b> 3.85 in x 1.3 in
<b>Resistance:</b> 1.0ohm
<b>Charging Time:</b> 1-2 hours
<b>Max Temp:</b> 428°F
<b>Capacity of Chamber:</b> 0.9mL

**To Turn on/off:** Press the button 5 times. (Turn device off when not in use)

**To Change Temp:** Press and hold the button for 2 seconds.

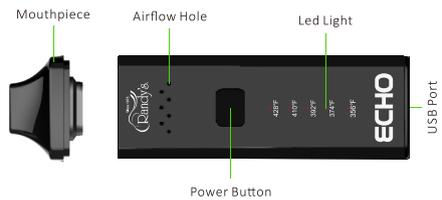

### CHARGING

**To Charge Echo:**  
 → Plug the included USB charger into a wall adapter.  
 → Plug the Micro USB into the device. Illuminated LED lights will confirm charging.

When plugged in & charging, the heat setting LEDs will be illuminated. They will indicate the level of charge for the battery. The LEDs will shut off once the battery is fully charged.

**LED Battery Indicators**

**Caution**  
 Only charge the battery with the included charger! Never charge the Echo with a chord that is more than 5V/1A. Otherwise it can cause damage to the battery serious personal injury, or fire.

**Warning:** DO NOT put this product away or leave it for extended periods of time with a low charge. If the battery falls below 2% then it will no longer accept a charge. Do not leave the device unattended while charging. Only use the included charger to charge your device.

### TROUBLESHOOTING

No vapor being produced:  
 1. Ensure device is turned on.  
 2. Make sure your battery is charged.  
 Regular maintenance and cleaning of your Echo is highly recommended.

- To clean your device, make sure it is turned off and cooled down. Remove the magnetic cap. You may either use a damp cloth or cotton swab to clean the mouthpiece and baking chamber. Once cleaned, allow it to air dry or dry off with a soft cloth or towel.

Do not use the Echo if it is damaged in any way including but not limited to: dents, overheating, unusually restricted airflow and/or electrical malfunction. Do not attempt to repair the product by disassembling the unit. Contact Randys.

If you lose any part or need a replacement please visit the shop where you purchased the device or you can shop [Randys.com](http://Randys.com).

**WARNING:** This product can expose you to chemicals including Chromium, which is known to the State of California to cause cancer. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

### WARRANTY CLAIM INSTRUCTIONS

To file a claim online:  
[Randys.com/warranty](http://Randys.com/warranty)  
 or  
 Email: [Sales@Randys.com](mailto:Sales@Randys.com)

**Please have the following items before filing a warranty claim:**  
 1. **Proof of Purchase** - We cannot accept any warranty without a proof of purchase.  
 2. **Proof of Legal Age** - We are not going to steal your identity. We legally cannot proceed without verifying your age.  
 3. **Short Video/Picture** - This is so we can help identify the problem. If there is a simple solution that we can help fix before the hassles of shipping wed love to get you back to enjoying your product.

**Warranty Claims take 2-3 weeks to process.**

The Randys Echo has a one year warranty from date of purchase. Warranty claims must be filed within 365 days of receipt purchase date.

**Sometime we request defective parts be returned for inspection, please include:**

- The defective part (Please only send parts that are defective and clean)
  - A copy of your proof of purchase
  - A copy of proof of legal age
  - A note detailing the issue(s)
  - Return address
- Please Return to:**  
 Randys Warranty  
 P.O. Box 1253  
 Holland, OH 43528