

User Manual

Randy's Randy's Randy's

KEY FEATURES





Type-C Charging



DEVICE OVERVIEW



CHARGING

Charging Time:

1.5 Hours

Charging Indicators:

While charging, the light indicator will show Red. When the device is fully charged, the light will show Green.



Battery Level Indicators:

Press button 1 time to display battery level color:



TROUBLESHOOTING

Low Power Warning:

When the voltage is lower than 20% (3.2V), light indicator will flash Red 10 times and will automatically shut down.

Short Circuit:

Light indicator will flash 3x, and then shut down.

PREHEATING

Once the device is on, it will automatically start preheat mode after 5 seconds to the set temperature.

The device will vibrate once when starting preheat mode. When the set temperature is reached, the device will vibrate 2x.

At 440°F the device will end the heating cycle after 2 minutes. All other temperatures will end the heating cycle after 3 minutes. The device will vibrate 2x and then turn off when the heating cycle is finished.

HOW TO USE



POWER ON/OFF

Click the power button 5x to turn on or off.







TEMP. RANGE

Led light indicators will display current temp.



Grind your herb and fill the desired amount into the chamber.



Pack your herb into the chamber.





USER TIPS

For the best results, fill the chamber half way or more. Do not pack tightly.



Loosely fill the chamber, then gently pack it down. If overpacked, the Whim won't have functinoal airflow.

Whenever possible after use, allow unit to cool, and stir herbs before next cycle.

When finished using Whim, stir your herb. If discolored, it is no longer usable.

HOW TO CLEAN

Cleaning the Chamber

- Turn device off and allow to cool down.
 - Open the bottom cap.







 Use Randy's Wipes or Snaps to gently wipe the chamber clean.



5 Turn Whim right side up to ensure no alcohol drips into battery.

HOW TO CLEAN

Cleaning the Airway Channel



Open the bottom Cap.

Take off the mouthpiece.

Use the multi tool to clean the straight airway path directly from the mouthpiece side.

Cleaning the Mouthpiece

Completely disassemble the mouthpiece to clean.



Use a Randy's Wipe or Snap and gently wipe the mouthpiece clean.



Do not leave the mouthpiece soaking in alcohol as this may damage the materials.

WHAT'S INCLUDED



TYPE-C CHARGING CABLE