

ATOMIZER CLEANER & COIL CHANGE

1. For best results, clean the glass dome with Randy's Black Label Cleaner.
2. Remove the glass mouthpiece. Use a cotton swab to wipe the inner part of the glass and wipe again with a damp paper towel.
3. To clean the heating element, unscrew the heating coil and use a cotton swab to wipe the inner part of the ceramic plate. Next, wipe with a damp paper towel.
4. To change the coil, unscrew the old coil and screw in the new coil.

NOTE: DO NOT SUBMERGE DEVICE (INCLUDING BATTERY) INTO WATER. HEATING ELEMENTS WILL NEED TO BE REPLACED ON OCCASION.

6

WARRANTY

The Randy's PILOT has a 90 day warranty from date of purchase. Defective part must be returned within 90 days of receipt date.

Troubleshooting:

- You can check the wall charger adapter by trying another wall adapter (this is a common USB to Wall adapter).
- You can check the USB adapter by trying another USB adapter (this is a common USB adapter. Example: Android phones use the same USB cable).

We do not warranty the product or any parts of the products from careless damage such as dropping the product resulting in a damaged unit or damaged mouth piece. When the Open Glass Attachment is on the PILOT, we do not recommend standing it vertically on its own. It could fall and break the glass.

WE CAN NOT REPLACE ANY UNIT OR PART WITHOUT A RECEIPT.

7

WARRANTY (CONTINUED)

Please return to:
Randy's Warranty
PO Box 1253
Holland, OH 43528

Send us:

1. The defective part. (Please do not send the entire unit if only 1 part is defective)
2. A copy of the receipt
3. A copy of proof of legal age must be included (driver's license etc.)
4. A note detailing the issue
5. Return Address

All request and notices from all Customers under this warranty shall be emailed to info@randys.com.

WARRANTY REISSUES USUALLY TAKE 2 TO 3 WEEKS TO PROCESS.

8

PRODUCT SUGGESTION

For efficient glass cleaning, use Randy's Black Label Cleaner to clean Glass Attachment. **Avoid contact with electronics & elements on your PILOT.**



For extra parts, visit www.randys.com.



9



PILOT

User Manual

Randy's is a registered trademark of SNT Ltd.
Imported by Randy's Products, LLC
© 2016 Randy's,
All Rights Reserved.

**NOT INTENDED FOR NICOTINE OR TOBACCO USE.
FOR USE WITH LEGAL HERBS ONLY.**

21+

Thank you for purchasing the Randy's PILOT vaporizing pen for concentrates. Read and follow the instructions carefully. Understand them fully before your first use of the Randy's PILOT vaporizing pen. It is recommended that these instructions are put in a safe place for future reference. We hope you enjoy the quality and performance of your new vaporizer.


You must be over 21 years old to purchase and use the Randy's PILOT. This product should not be used by children, women who are pregnant or breast feeding, or those with life threatening illnesses without first consulting a doctor.

Randy's PILOT is not a medical device and is not intended to diagnose, cure, treat, or prevent any diseases or other conditions. If you have any health problems, consult your doctor before using. Randy's PILOT is not intended to administer medicinal or illegal substances of any kind. Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under the law of your jurisdiction. For proper intended use only.

THIS PRODUCT DOES NOT CONTAIN TOBACCO OR CONCENTRATE MATERIALS. NOT INTENDED FOR NICOTINE OR TOBACCO USE. FOR USE WITH LEGAL HERBS ONLY.

1

PILOT CONTENTS

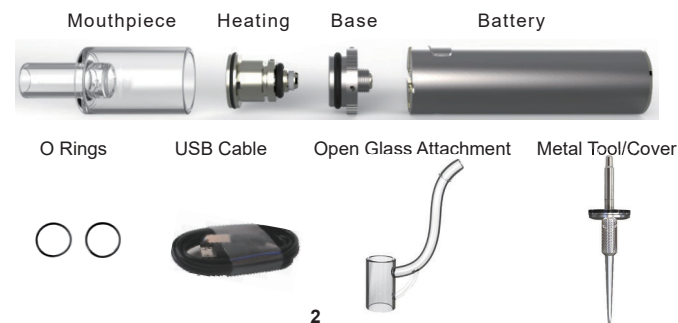

2

SPECIFICATIONS

Battery Capacity	1500mah
Battery Power	full-power output
Charging Voltage/Current	5V/500mah
Working Voltage	3.3-4.2V
On/Off	Click the button 5 times consecutively
Battery Low	LED lights flash 10 times rapidly
Atomizer Coil	Ceramic Plate(baking design, not exposed) 0.8ohm
Size	120*19mm
Thread	510
Time Protection for each press	20 seconds
Short Circuit Protection	Light flashes 5 times rapidly

WARNING: The PILOT can not be used while charging. The battery can pose danger if used while charging. Always store PILOT in a dry place to protect the battery against the effects of weather. **KEEP OUT OF REACH OF CHILDREN AND/OR UNQUALIFIED PERSONS.**

3

CHARGING

1. A red light will appear to notify that the battery is charging.
2. The red light will turn off once the battery is fully charged.
3. Once your PILOT is fully charged, allow the battery to cool before placing in storage or using.

NOTE: If there are any concerns, remove the power cord from the PILOT and switch off the power. Charge your PILOT at least 6 hours before use to protect and extend the battery. The battery will flash 10 times and automatically shut off when battery power is low.

OPERATION GUIDANCE

1. Remove the PILOT glass mouthpiece, exposing the heating element.
2. Use the metal tool to put a small amount of concentrate on the heating element.
3. Once the concentrate is on the heating element, attach the glass mouthpiece.
4. Click the button 5 times in quick succession to turn PILOT on/off. The LED light will flash 3 times.
5. Press button and inhale.

4

OPEN GLASS ATTACHMENT INSTRUCTIONS

1. Inhale to create airflow & press power button.



2. With metal tool, place concentrates on heating element.



3. Use cover on metal tool to enclose vapor & continue to inhale.

5