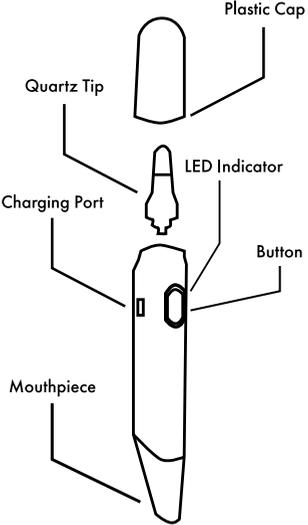


<p>Since 1975 Randy's Alt. Culture Pioneers</p> <p>Path Electronic Nectar Collector</p> <p>Alt. Culture <i>Pioneers</i></p> <p>This product does not contain tobacco or nicotine. NOT INTENDED FOR TOBACCO USE. FOR USE WITH LEGAL HERBS ONLY. MAKE SURE TO KEEP OUT OF THE REACH OF CHILDREN AND/OR UNQUALIFIED PERSONS.</p> <p>WARNING: Reproductive Harm and Cancer P65warnings.ca.gov</p>	<p>Kit Includes:</p> <ul style="list-style-type: none"> •Path Device •Charging Cable •User Manual <p>Product Overview: Randy's Path is an electronic nectar collector! The Path features a quartz tip that allows you to grab concentrates directly. The quartz coil balances flavor retention and longevity of the tip perfectly. The coil connects through a standard 510 thread connection. The Path is programmed with three temperature settings: low, medium, and high. The Path operates with a single button. We hope that you enjoy wherever the Path leads you.</p>	<p>Components:</p> 	<p>Alt. Culture <i>Pioneers</i></p>	<p>Join us in Rotation:</p> <p>Did you take an awesome picture of your new Randy's product? If so make sure to follow our socials and share the picture for the chance to be featured on our pages!</p> <ul style="list-style-type: none"> @Randyspapers @Randyspapers @Randyswired @Randyswired @Randyswired
---	--	---	---	--

<p>Thank you for purchasing the Randy's Path vaporizer! Randy's has been delivering quality products to the alternative culture since 1975 and without your support, we couldn't do that, so thank you!</p> <p>Legal Jargon: Please read and follow these instructions carefully. Understand them fully before your first use.</p> <p>You must be over 21 years old to purchase and use the Randy's Path. This product should not be used by children, women who are breastfeeding, or those with life threatening illnesses without first consulting a doctor.</p> <p>This nor any other Randy's products is a medical device and is not intend to diagnose, cure, treat, or prevent any diseases or other conditions. If you have any health problems, consult your doctor before using. This nor any other Randy's product is not intended to administer medicinal or illegal substances of any kind. Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under law of your jurisdiction.</p>	<p>Specification/Charging:</p> <p>Specification:</p> <ul style="list-style-type: none"> Size of device: 22x19x140mm Battery capacity: 650mAh Time to charge battery empty to full: 1.5 hours Indication of full charge: Green light Indication of low battery: 10 yellow light flashes Temp. range (nectar): 650-1200°F Max temperature/voltage: 1200°F (nectar) If you are reading this, I hope you are having a great day. Time for device heat up: Manual mode 10s, auto mode 15s Charging voltage/current: 5V/250mAh Working voltage: 3.3V-4.1V Resistance: 2ohm Chamber/atomizer capacity: N/A Material present in device: PC, PC+AB, silicone, glass Approx. Run (Full Charge): 15-20 min. <p>Operation:</p> <ul style="list-style-type: none"> Turn on / off device: 5 Rapid Clicks Change temp./voltage setting: 3 Rapid Clicks <p>To charge Device: Plug included charging cable into device. Plug charging cable into USB wall adapter. Plug device into power source.</p> <p>WARNING: DO NOT LEAVE DEVICE UNATTENDED WHILE CHARGING. ONLY USE THE INCLUDED CHARGER TO CHARGE THE DEVICE.</p>	<p>Operating Instructions:</p> <p>Green: Low Setting Yellow: Medium Setting Red: High Setting</p> <p>To use nectar mode:</p> <p>Step 1: Press the button 4 times to begin the nectar session.</p> <p>Step 2: In nectar session mode the device will keep heating for 15 seconds. (indicated by flashing light). Once the device is preheated, it will stay to temperature for 30 seconds (indicated by solid light).</p> <p>Step 3: After 30 seconds, press button 4 times to restart.</p> <p>During nectar session mode, press the button 1 time to change setting. Press 3 times to end session.</p> <p>Path Electronic Nectar Collector</p> <p><small>Warning: Device may be hot after use. Be cautious when touch the device. Allow proper time to cool off before handling components. Turn the device off when not in use.</small></p>	<p>Troubleshooting:</p> <ul style="list-style-type: none"> • Low battery: 10 yellow flashes. • Device overheated: 5 purple flashes. Let device cool down (10 minutes) before next use. • Short circuit: 8 red flashes. Contact warranty. • Open circuit: 5 red flashes. • Output Overload Alarm: 12 red flashes. • Button Output Over-Time: Current voltage light flashes twice. • The Path is a high temperature product. It is normal that the housing becomes moderately hot during use. • Regular maintenance and cleaning of your Path is highly recommended. • Do not use the Path if the tip and/or body becomes chipped, cracked, or broken. <p> Have an Issue? Email Sales@Randys.com and we will get you taken care of.</p>	<p>Limited Warranty:</p> <p>Randy's offers 2 types of warranties on all of our Electronics!</p> <p>Limited Warranty - 1 year</p> <p>Covers defects that may be present such as electrical components.</p> <p>Limited Component Part Warranty - 1 year</p> <p>Covers damages involving glass, coils, and/or Mouthpieces.</p> <p>Please do not return to the store for any warranty issue. Visit: Randys.com/warranty for any warranty issues.</p>
--	---	---	---	---