


THIS PRODUCT DOES NOT CONTAIN TOBACCO OR NICOTINE. NOT INTENDED FOR TOBACCO USE. FOR USE WITH LEGAL HERBS ONLY.

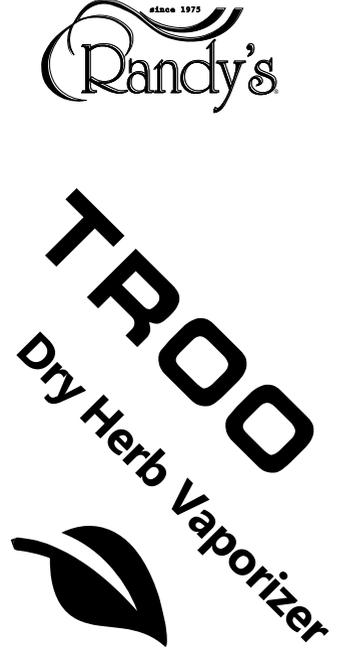

© @randyswired @randyswired @randyspapers

KIT INCLUDES/OPERATING


- ➔ Troo Vaporizer
- ➔ Charging Cable/Wall Adapter
- ➔ Cleaning Brush
- ➔ 5 Protective Silicone Mouth Guard
- ➔ 5 Mesh Screens

Make sure to keep out of the reach of children and/or unqualified persons.


The Troo is specifically designed to vaporize your herb, and not to combust. The 3 preset temperature settings are specifically set to offer 3 different styles of vaporization. The lowest setting, RED, will heat your material to a max temp. of 360°F. At this temperature the material will vaporize more slowly. At the medium setting, GREEN, the material will be heated up to maximum of 380°F. Typically this will result in your contents being heated more quickly and a shorter session. The final heat setting is BLUE, with a max temp. of 420°F. At this temperature, the material will be fully heated and produce the densest amount of vapor.

REMOVING MOUTHPIECE

Apply pressure from side to side on the Troo!

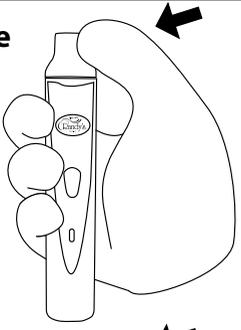

DO NOT TRY and remove the mouthpiece from the front or the back.

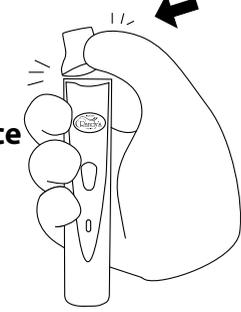

IMPORTANT: Always allow mouthpiece to cool down before removing.

CONNECT WITH OUR SOCIALS

- @Randyspapers
- @Randyspapers
- @Randyswired
- @Randyswired
- @Randyswired

LIMITED WARRANTY INFO

The Randy's Troo comes with a 1 year limited warranty on the device known as a standard warranty. This includes defects that might be present in the body and electronic parts.

We also offer a limited component part warranty on glass components, coils and/or mouthpieces. For component part warranty claims involving glass, coils, or mouthpieces there is a shipping and processing fee of \$9.99 per claim for continental US orders and \$16.50 per claim for non-continental US and international orders. Please email Sales@Randys.com for more information about warranty claims on glass, coils and mouthpieces. Please include your proof of purchase, proof of legal age and a short description of your issue and the product you are inquiring about.

The Randy's limited warranty is limited to a maximum of 2 replacements on any given purchase of a device. The item must be defective (i.e. this is not an exchange or refund system), and will be replaced with an equal item from current inventory. The limited warranty does not apply to product lines that have been discontinued by Randy's. The defective item must be returned to Randy's per the instructions on the next page.

The details listed above are subject to change without warning and/or notice.

INTRODUCTION

Thank you for purchasing the Randy's Troo! Please read and follow the instructions carefully. Understand them fully before your first use. It is recommended that these instructions are put into a safe place for future reference. We hope you enjoy the quality and performance of your new Troo vaporizer.

You must be over 18 years old (21 in some states) to purchase and use the Randy's Troo. This product should not be used by children, women who are pregnant or breastfeeding, or those with life threatening illnesses without first consulting a doctor!

Randy's Troo is not a medical device and is not intended to diagnose, cure, treat, or prevent any diseases or other conditions. If you have any health problems, consult your doctor before using. Randy's Troo is not intended to administer medicinal or illegal substances of any kind. Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under law of your jurisdiction.

SPECIFICATIONS / CHARGING

Battery Capacity: 2200mAh
Charging Voltage/Current: 5V/500mAh
Working Voltage: 3.3V-4.2V
Pen Size: 5 in x 1 in
Resistance: 1.0ohm
Charging Time: 1-2 hours
Max Temp: 420°F

To Turn on/off: Press the button 5 times.
To Change Temp: Press button 3 seconds

To Charge Troo:

- ➔ Plug the included USB charger into the wall adapter.
- ➔ Plug the Micro USB into the Device. An LED indication will confirm charging.

IMPORTANT: When you first purchase the Troo, charge it for 3 to 4 hours. After this, do not charge the Troo for longer than 2 hours. Charging the battery for more than 2 hours at a time may lead to drop off of battery longevity and performance. Do not leave the device unattended while charging. Only use the included charger for your device

OPERATING INSTRUCTIONS

Step 1: Carefully remove Mouthpiece.
Step 2: Gently pack ground material into the Troo baking chamber.
Step 3: 5 clicks to turn the battery on.
Step 4: Select Temp Setting. - 3 second button press will change temp.

Red: 360°F - LOW
Green: 380°F - MEDIUM
Blue: 420°F - HIGH

Step 5: Wait for the device to heat up. The LED indicator will turn green when the device fully heats up.
Step 6: Once the device is to temperature inhale slowly. Enjoy.

Warnings:

- ➔ Vaporizer may be hot after use. Be cautious when touching the device after use.
- ➔ Turn off the vaporizer when not in use!

TROUBLESHOOTING

No vapor being produced:

1. Ensure device is turned on.
2. Make sure your battery is charged.

Regular maintenance and cleaning of your Troo is highly recommended.

Do not use the Troo if the walls/mouthpiece become chipped, cracked, or broken.

If you lose any part or need a replacement, visit the shop where you purchased the device or you can shop Randys.com.

WANT MORE PRECISE CONTROL? CHECK OUT THE RANDY'S ZIPP



DIGITAL TEMPERATURE CONTROL!

WARRANTY CLAIM INSTRUCTIONS

To file a claim online:

Randys.com/warranty
or
Email: Sales@Randys.com

We can not replace any unit or part without a proof of purchase. Warranty claims usually take 2-3 weeks to process.

Please Return to:

Randy's Warranty
P.O. Box 1253
Holland, OH 43528

Send us:

1. The defective part (Please only send parts that are defective and clean)
2. A copy of your proof of purchase
3. A copy of proof of legal age
4. A note detailing the issue(s)
5. Return address

We do not warranty the product or any part of the product from careless damage such as dropping the unit or damaged mouth pieces. The Warranty does not cover coils or any glass components. Due to usage, the coils will need replaced on occasion.